


# WALL INTERMEDIATE MOUNT B

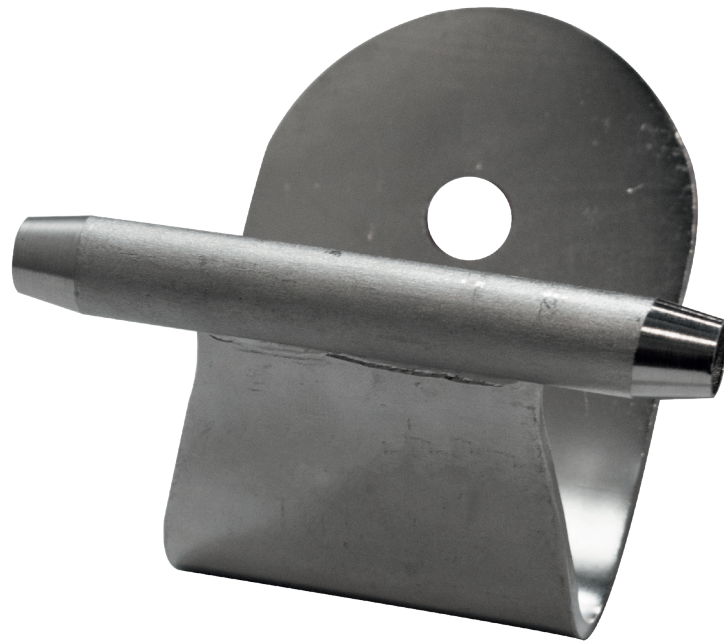

The Wall Intermediate Point is a cable support placed at specific intervals. Due to its special design, the overhead shuttle slides easily over it without disconnecting from the lifeline.

# WALL INTERMEDIATE MOUNT B



## Cleaning & maintenance

Products do not require any special maintenance, aside from cleaning. Cleaning of your SDA product is important to prolong its lifetime. Use cold water and soap to eliminate all type of residue (dirt, chemicals, etc.). Dry gently out of sunlight. After use, place your product in a well-ventilated area and avoid excessive heat. Proper care prevents premature wear of the equipment.

## Inspection

Look for damage, deterioration or malfunction before and after every use. Inspections should only be made by trained and authorized personnel. Every inspection should be registered in the product dossier.

Weight :	Breaking Strength :	Anchorage :	Dimensions :	Marking :
0,24 kg.	>25,0 kN	Safety nut	Width: 100 mm Height: 60 mm Depth: 70 mm	Batch Number
Packaging :	Intermediate :	Surface Treatment :	Color :	
Unit per plastic bag	Stainless Steel 316 - 3 mm	Electropolished	Chrome	